DESKLINE®
IMPROVING ERGONOMICS

DL12, DB12, DL14, DB14, DL17 system with CBD6S

To learn more about LINAK, please visit:

WWW.LINAK.COM

LINAK®
WE IMPROVE YOUR LIFE

Contents

Preface 4

Valid for 5

Important information 6

Safety instructions 6
- General 6
- Before installation, reinstallation or troubleshooting 7
- Before start-up 7
- During operation 7
- Misc. 7
- Only for EU markets 8
- Only for Non EU markets 8
- Misuse 8

Repairs 9

Manufacturer's declaration 9

Misc. on the DESKLINE® system 10
- Warranty 10
- Maintenance 10

ETL-markering 11

Description of the DESKLINE® system 12
Mounting guidelines for the DL14 system 13
- Mounting top 13
- Mounting foot 15

Mounting guidelines for the DL12 system 16
- Mounting top 16
- Mounting foot 16

Mounting guidelines for the DL17 system 17
- Mounting top 17
- Mounting foot 17

Mounting guidelines for the DB12 and DB14 systems 18

Mounting guidelines for the CBD6S (SMPS) 20

Electrical connection of the DB/DL system 21

Initialisation of the DESKLINE parallel system 22

PIEZO™ : description of the feature 23

Accessories and repair 24

Disposal of LINAK products 25

Labels 26

Drawing appendix 27

Declaration of conformity 33

Addresses 36

Preface

We are delighted that you have chosen a product from LINAK A/S. LINAK systems are high-tech products based on many years of experience in the manufacture and development of actuators, electric control boxes, controls, and chargers.

We are also constantly improving our products to meet customer requirements.

This User Manual will tell you how to install, use and maintain your LINAK DESKLINE® products.

We are sure that the DESKLINE® products will give you many years of problem-free operation. Before our products leave the factory they undergo full function and quality testing. Should you nevertheless experience problems with your systems, you are always welcome to contact our service departments or service centres.

LINAK subsidiaries and distributors all over the world have authorised service centres, which are always ready to help you.

LINAK provides a warranty on all its products. This warranty, however, is subject to correct use in accordance with the specifications, maintenance being done correctly and any repairs being carried out at a service centre, which is authorised to repair LINAK products.

Changes in installation and use of LINAK systems can affect their operation and durability. Changes must therefore only be made by agreement with LINAK A/S and are made at your own risk.

LINAK A/S

Valid for:

This User Manual is valid for the following products:

(See the first 3 - 5 characters on the label)

Columns:	DL12, DL14, DL17
Built-in actuators:	DB12, DB14
Control boxes:	CBD6S 200W, CBD6S 300W
Controls:	DP1U/DPF1M (if memory function is required), DP1C//DPT/DPF1C (if memory function and display are required) or DPA/DPB/DP1K/DP1V/DPFK (if only up/down is required).

Important information

Important information on LINAK® products can be found under the following headings:

Warning!
Failure to comply with these instructions may result in accidents involving serious personal injury.

Failing to follow these instructions can result in the product being damaged or being destroyed.

Safety instructions

General

Safe use of the system is possible only when the operating instructions are read completely and the instructions contained are strictly observed.

Failure to comply with instructions marked with the "NOTE" symbol may result in serious damage to the system or one of its components.

It is important for everyone who is to connect, install or use the systems to have the necessary information and access to this User Manual. Follow the instructions for mounting – risk of injury if these instructions are not followed.

The appliance is not intended for use by young children or infirm persons without supervision.

If there is visible damage on the product it must not be installed.

Please note that during construction of applications, in which the actuator is to be fitted, there must be no possibility of personal injury, for example squeezing of fingers or arms.

Assure free space for movement of applications in both directions to avoid blockade.

Before installation, reinstallation, or troubleshooting

- Stop the DB/DL
- Switch off the power supply and pull out the mains plug.
- Relieve the DB/DL of any loads, which may be released during the work.

Before start-up:

- Make sure that the system has been installed as instructed in this User Manual.
- Make sure that the voltage at the control box is correct before the system is connected to the mains.
- System connection. The individual parts must be connected before the control box is connected to the mains. See the User Manual for LINAK actuators, if necessary.

During operation:

- If the control box makes unusual noises or smells, switch off the mains voltage immediately.
- Take care that the cables are not damaged.
- Unplug the mains cable on mobile equipment before it is moved.

Misc.

The actuator system has a sound level below 55dB(A) in typical applications.

Updated manuals and declarations can always be found here: *www.linak.com/deskline*

Only for EU markets

This appliance can be used by children aged from 8 years and older and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they are under supervision or have been instructed in the use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Only for Non EU markets

Persons who do not have the necessary experience or knowledge of the product/products must not use the product/products. Besides, persons with reduced physical, sensory or mental abilities must not use the product/products, unless they are under surveillance or they have been thoroughly instructed in the use of the apparatus by a person who is responsible for the safety of these persons.

Moreover, children must be under surveillance to ensure that they do not play with the product.

It is the operator's responsibility to ensure that there is free space for the application to move without risk for the operator or bystanders before operating the application.

Misuse

Do not overload the actuators – this can cause danger of personal injury and damage to the system.

Do not use the actuator system for lifting persons. Do not sit or stand on a table while operating – risk of personal injury.

Do not use the system in environments other than the intended indoor use

Repairs

In order to avoid the risk of malfunction, all DESKLINE® repairs must only be carried out by authorised LINAK workshops or repairers, as special tools must be used and special gaskets must be fitted. Lifting units under warranty must also be returned to authorised LINAK workshops.

Warning!
If any of the DESKLINE® products are opened, there will be a risk of subsequent malfunction.

Warning!
The DESKLINE® systems do not withstand cutting oil.

DECLARATION OF INCORPORATION OF PARTLY COMPLETED MACHINERY

LINAK A/S
Smedevænget 8
DK - 6430 Nordborg

Herewith declares that LINAK DESKLINE® products as characterized by the following models and types:

Control Boxes	CBD4, CBD5, CBD6, CBD6S
And	
Linear Actuators	LA31, DB4, DB5, DB6, DB7, DB9, DB12, DB14, DB16, LA23
Lifting Columns	DL1A, DL2, DL4, DL5, DL6, DL7, DL8, DL9, DL10, DL11, DL12, DL14, DL15, DL16, DL17, LP2, LP3, BASE1
And	
Desk Panels	DP, DPA, DPB, DPH, DPF, DPT, DP1C, DP1K, DP1L, DP1V, DP1U, WDPL1
RF Controls	HB10, HB20, RFR and RFT
And	
Accessories	SLS

comply with the following parts of the Machinery Directive 2006/42/EC, ANNEX I, *Essential health and safety requirements relating to the design and construction of machinery*:

1.5.1 Electricity supply

The relevant technical documentation is compiled in accordance with part B of Annex VII and that this documentation or part hereof will be transmitted by post or electronically to a reasoned request by the national authorities.

This partly completed machinery must not be put into service until the final machinery into which it is to be incorporated has been declared in conformity with the provisions of the Machinery Directive 2006/42/EC where appropriate.

Nordborg, 2014-04-10

LINAK A/S
John Kling, B.Sc.E.E.
Certification and Regulatory Affairs
Authorized to compile the relevant technical documentation

Misc. on the DESKLINE® system

Warranty
There is a 36 months' warranty on DESKLINE products against manufacturing faults from the production date of the individual products (see label).
LINAK A/S warranty is only valid in so far as the equipment has been used and maintained correctly and has not been tampered with. Furthermore, the system must not be exposed to violent treatment. In the event of this, the warranty will be ineffective/invalid. For further details, please see standard terms of sale and delivery forLINAK A/S.

Maintenance
Clean dust and dirt on the outside of the system at appropriate intervals and inspect them for damage and breaks.
Inspect the connections, cables and plugs and check for correct functioning as well as fixing points.

Service of double insulated products:

Class II

A Class II or **double insulated** electrical appliance is one which has been designed in such a way that it does not require a safety connection to electrical earth (US: ground).
The basic requirement is that no single failure can result in dangerous voltage becoming exposed so that it might cause an electric shock and that this is achieved without relying on an earthed metal casing. This is usually achieved at least in part by having two layers of insulating material surrounding live parts or by using reinforced insulation.
There is no earthing/grounding means provided on the product, and no earthing/grounding means is to be added to the product.
In Europe, a double insulated appliance must be labelled "Class II", "double insulated" or bear the double insulation symbol (a square inside another square).
Servicing a double insulated product requires extreme care and knowledge of the system, and is to be done only by qualified service personnel. Replacement parts for a double insulated product must be identical to the parts they replace.

The cleaners and disinfectants must not be highly alkaline or acidic (pH value 6-8).

ETL-marking

Due to space limitations, the complete ETL-marking demands are not represented on the marking plates.

The full ETL Recognized Component markings are shown here.

C/N 120690

Conforms to UL962
Cert. to CSA Std. C22.2 No. 68-09
ETL Recognized Component mark for Canada and United States

C/N 9901916

Conforms to UL962
Cert. to CSA Std. C22.2 No. 68-09
ETL Recognized Component mark for Canada and United States

C/N 4008003

Conforms to UL962
Cert. to CSA Std. C22.2 No. 68-09
ETL Recognized Component mark for Canada and United States

C/N 4008004

Conforms to UL962
Cert. to CSA Std. C22.2 No. 68-09
ETL Recognized Component mark for Canada and United States

C/N 4008005

Conforms to UL962
Cert. to CSA Std. C22.2 No. 68-09
ETL Recognized Component mark for Canada and United States

C/N 4008671

Conforms to UL962
Cert. to CSA Std. C22.2 No. 68-09
ETL Recognized Component mark for Canada and United States

C/N 4009507

Conforms to UL962
Cert. to CSA Std. C22.2 No. 68-09
ETL Recognized Component mark for Canada and United States

Description of the DESKLINE® system

Each DESKLINE® actuator/column is equipped with a motor and parallel/memory drive is ensured by means of software in the CBD6S (SMPS) that also takes account of an oblique load on the desk. Soft start and stop are also part of this software, which ensures a soft start and stop when adjusting the desk.

Application of the DESKLINE® system:
Irrespective of the load, the **duty cycle 10% ~ 6 min./ hour or max. 2 min. at continuous use** stated in the data sheets, must **NOT** be exceeded as this will result in a superheating of the motor and the control box. Exceeding the duty cycle will result in a dramatic reduction of the life of the system.

The DB/DL system range contains following products:

- 1 control box CBD6S 200W or CBD6S 300W (SMPS - Switch Mode Power Supply)
- DL12, DB12, DL14, DB14 or DL17 (1 - 4)
- 1 exchangeable mains cable
- Motor cables (1 - 4)
- 1 DP1U/DPF1M (if memory function is required) 1 DP1C//DPT/DPF1C (if memory function and display are required) or 1 DPA/DPB/DP1K/DP1V/DPFK (if only up/down is required).

Mounting guidelines for the DL14 system

Mounting top

The top of the column is supplied with 4 M6 threaded holes meant for mounting onto the desk frame. We advise you to fasten the desk frame by means of 4 pcs. M6 screws of a good quality (min. 8.8) and a suitable length, which must not go further than max. 14 mm into the column. The thrust moment must not exceed 10 Nm.

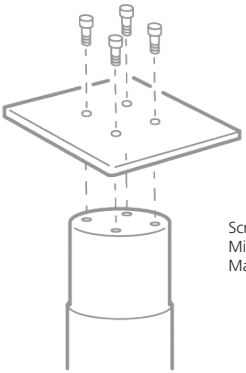

Screw length
Min. B + 9 mm
Max. B + 14 mm

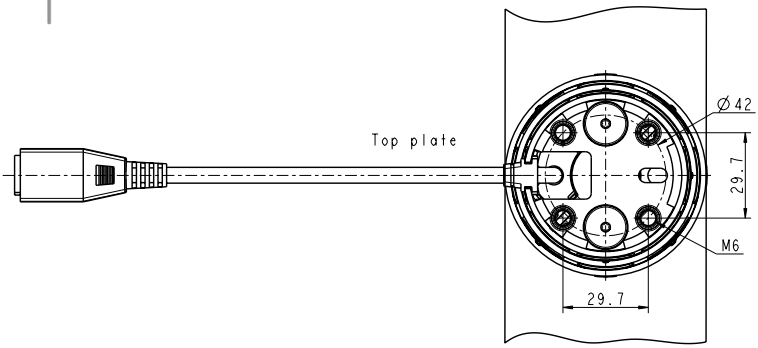

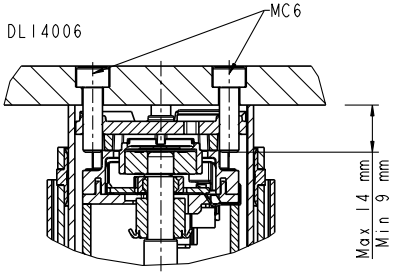

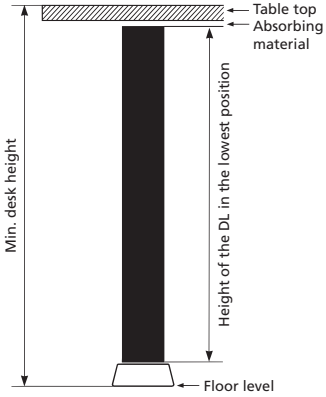

As the desktop amplifies the sound, we advise you to place a vibration/shock absorbing material between the desktop and the desk frame.

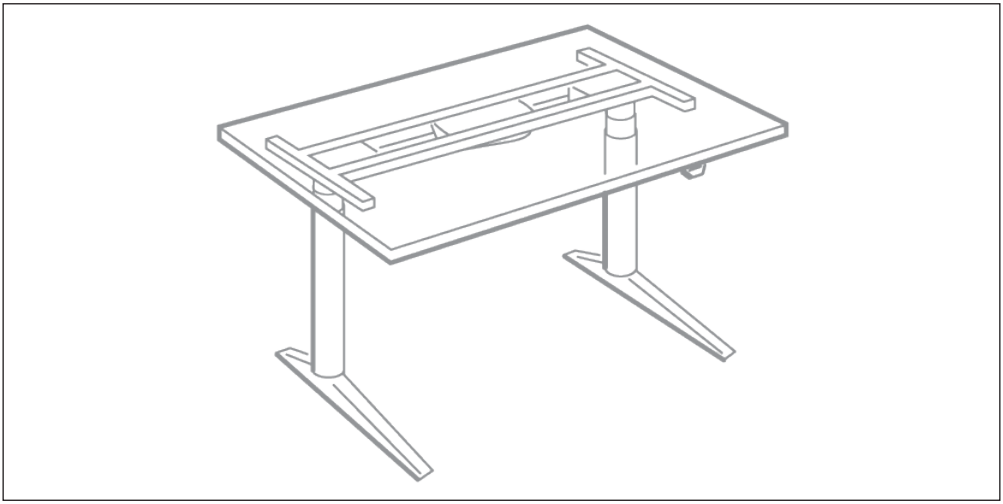

(Example of how to mount a 2-parallel DESKLINE® DL system)

LINAK recommends that the DESKLINE® DL system should be used in push applications.

Mounting guidelines for the DL14 system

Mounting foot

The DL14 is supplied with 4 M6 threaded holes and 2 M8 screws for mounting of the foot. You can either use 2 M8 screws or 4 M6 screws dependent on your foot design. We advise you to use screws of a good quality min. 8.8 and of a suitable length, which must not go further than 16 mm into the DL14 column. The thrust moment must not exceed 10 Nm in the bottom plate thread. The holes in the foot ought to be sufficiently larger than ø6 so that it is possible to bring the foot to a level line at assembly/mounting of the table.

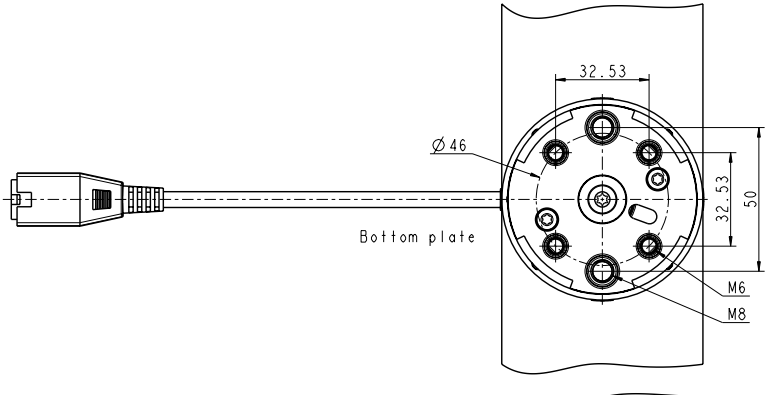

Mounted with 2 x M8

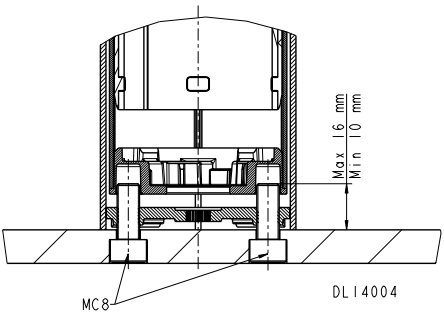

Mounted with 4 x M6

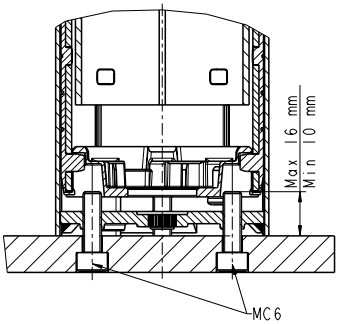

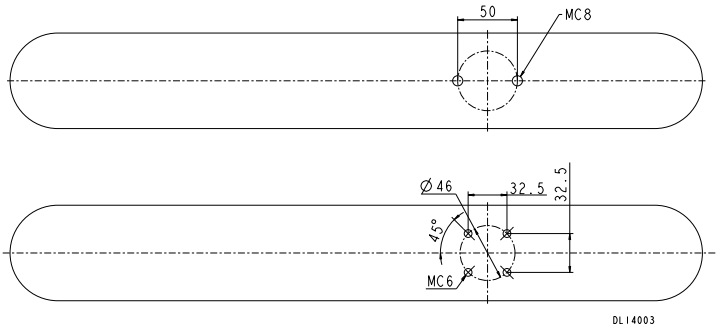

Mounting guidelines for the column DL12

Mounting top
The top of the column is supplied with 4 x M6 threaded holes meant for mounting onto the desk frame. We advise you to fasten the desk frame by means of 4 x M6 screws of a good quality (min. 8.8) and of a suitable length, minimum 12 mm. The screw torque must not exceed 10 Nm.

Mounting foot
The DL12 is supplied with 4 x M6 threaded holes. We advise you to use screws of a good quality min. 8.8 and of a suitable length. The length needs to be minimum 9 mm.
The screw torque must not exceed 10 Nm in the bottom plate thread.
The holes in the foot ought to be sufficiently larger than ø6 so that it is possible to bring the foot to a level line at assembly/mounting of the table.

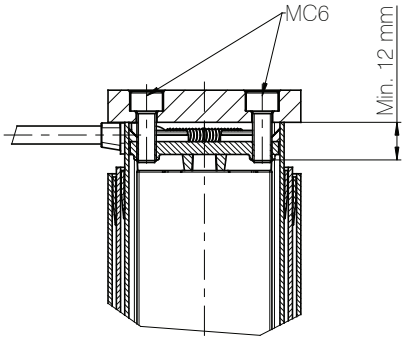

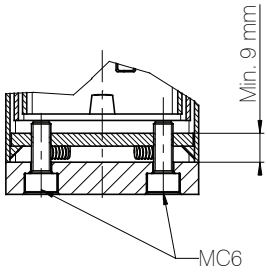

As the desktop amplifies the sound, we advise you to place a vibration/shock absorbing material between the desktop and the desk frame.

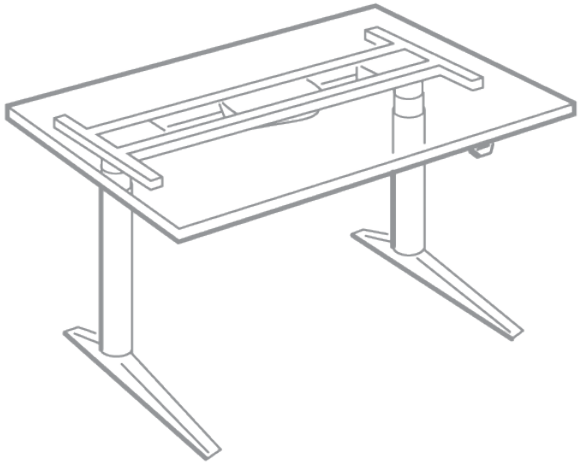

(Example of how to mount the DESKLINE® system)

Mounting guidelines for the DL17 system

Mounting top
The top of the column is supplied with 4 x MG threaded holes meant for mounting onto the desk frame . We advise you to fasten the desk frame by means of 4 x MG screws of a good quality (min. 8.8) and a suitable length of minimum 10 mm and must not go into the column further than maximum 14 mm. The screw torque must not exceed 10 Nm

Mounting foot
The DL17 is supplied with 4 x MG threaded holes and 2 x M8 screws for mounting of the foot. You can use either 2 x M8 screws or 4 x MG screws dependent on your foot design. We advise you to use screws of a good quality min. 8.8 and of a suitable length, which must not go into the DL17 column further than 16 mm. The screw torque must not exceed 10 Nm in the bottom plate thread.
The holes in the foot ought to be sufficiently larger than (1)6 so that it is possible to bring the foot to a level line at assembly/mounting of the table.

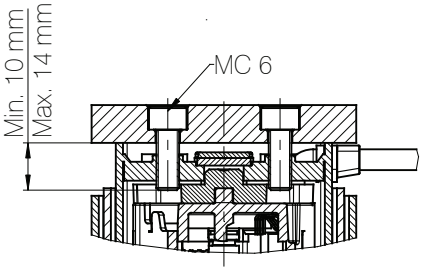

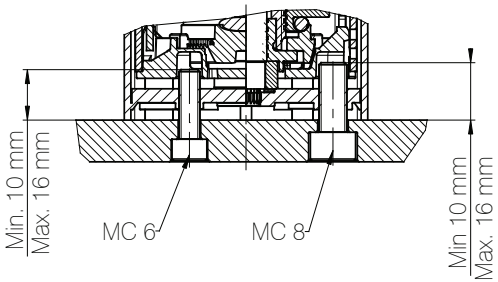

As the desktop amplifies the sound, we advise you to place a vibration/shock absorbing material between the desktop and the desk frame.

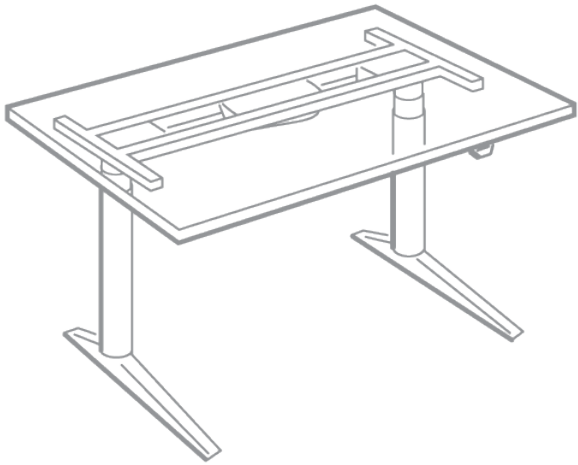

(Example of how to mount the DESKLINE® system)

Mounting guidelines for the DB12 and DB14

For detailed information on how to mount the DB12 or the DB14, please contact LINAK A/S.

The top of the motor is supplied with holes for the self-tapping special screws. These screws together with the 2 rubber washers are supplied with the DB12/DB14.
On the top of the motor there is the special rubber suspension, which should always be used when the DB12/DB14 is mounted in a column. The top flange where the motor is mounted must be 4 mm thick ±1 mm, and the 2 mounting holes should be ø12 mm with a centre distance of 36 mm. The screw torque must be 2 Nm ±0.1 Nm.

Top:

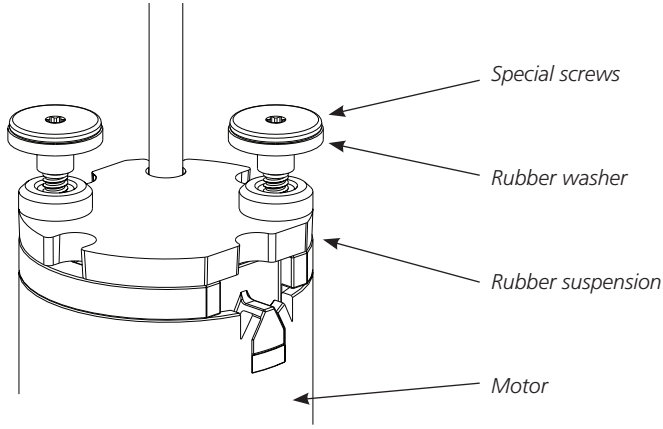

Middle tube: For detailed information on how to mount the middle tube of your column, please contact LINAK A/S

Bottom: At the bottom of the DB12 or the DB14 the inner spindle should be mounted by means of a 22-teeth spline profile and a M5 screw in the bottom of the spindle.

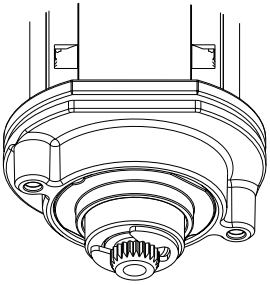

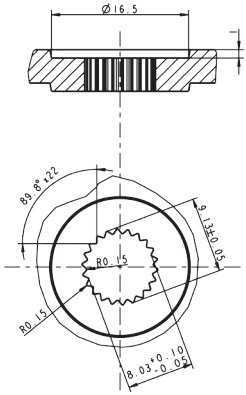

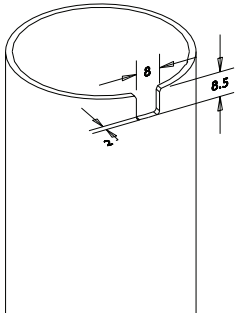

The DB12/DB14 gives the possibility of synchronous drive of the middle profile - to make sure that the profiles are in the right place you have to secure that both the hollow and the massive spindles are driven in the bottom position. For detailed information on how to mount the DB12/DB14, please contact LINAK A/S.

From the factory, the DB12/DB14 is delivered with the hollow spindle driven into end position. Please observe that the solid spindle may roll out during transportation/handling, but it must be rolled back to end position before mounting in the profile.

As the desktop amplifies the sound,we advise you to place a vibration/shock absorbing material between the desktop and the desk frame

Do not drive the DB12/DB14 to the outer end position before mounting. This will result in damaging the DB.

Example of how to mount the DESKLINE® system

Mounting guidelines CBD6S (SMPS)

The control box is to be fastened with 2 screws with a head diameter between Ø 8 and Ø 10 mm. Out of regard for the surface tension ø 10 mm is preferable due to lower surface tension. See drawing appendix for placing of mounting holes and the space the CBD takes up.

CBD6S 200W and CBD6S 300W

The CBD must not be packed in heat insulating material, but must be placed so that it can emit waste heat into the surroundings. There are no ventilation holes to consider, the CBD emits heat through the surface.
The plug must be visible when the CBD is mounted so that the supply to the CBD can be disconnected at replacement, if any.
The mounting screws on the control box must be fastened with a max. torque of 1 Nm.
The mounting surface to which the control box is attached should have a surface evenness of better than ±0.5 mm.

Bottom with cable grooves
The bottom of the CBD6S (SMPS) is equipped with two cable grooves improving the cable management when mounting. The grooves can be used to bypass the CBD for both motor cables and the mains cable (EU version only) from one side to the other, giving a cleaner design.

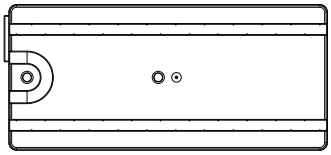

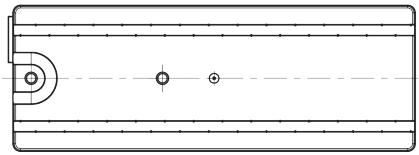

Remember to lead the cables through the grooves before mounting the control box.

For mounting and operation of the desk panel, please see the separate user manual for desk panels.

Electrical connection of the DB/DL system

The DB/DL system is to be connected as shown on figure 7. The DB/DL is to be connected to the sockets on the control box by means of the motor cables, which have a 6-pin plug in each end.

Finally, the mains cable is to be mounted and power switched on. Please note that the control box must only be connected to the voltage stated on the label.

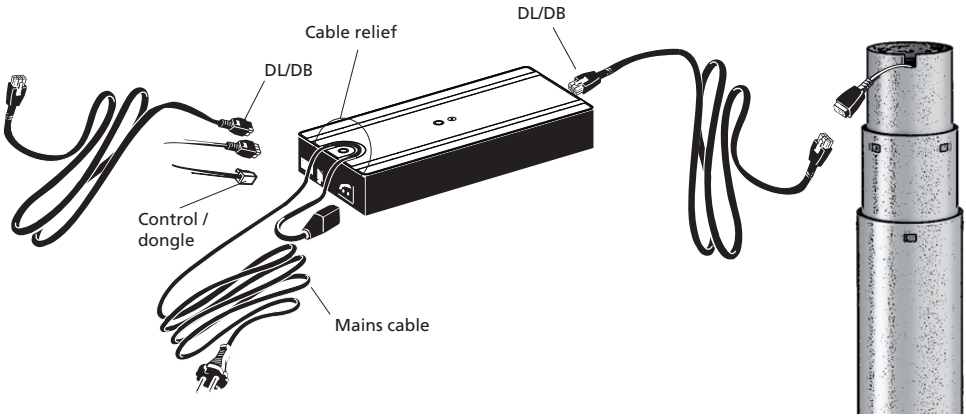

Figure 7

Initialisation of the DESKLINE® parallel system

The DESKLINE system is initialised by pressing the down button once or twice and holding it down until the DB/DL runs into end stop. It will then automatically run approx. 3 mm out again and hereafter slowly run in again. Only release the down button when the movement has stopped completely.

If the button is released before the sequence is completed, the initialisation is interuppted and must be started again from the beginning.

The first two times the system runs into the outward end-stop, it will automatically run approx. 3 mm back in inward direction.

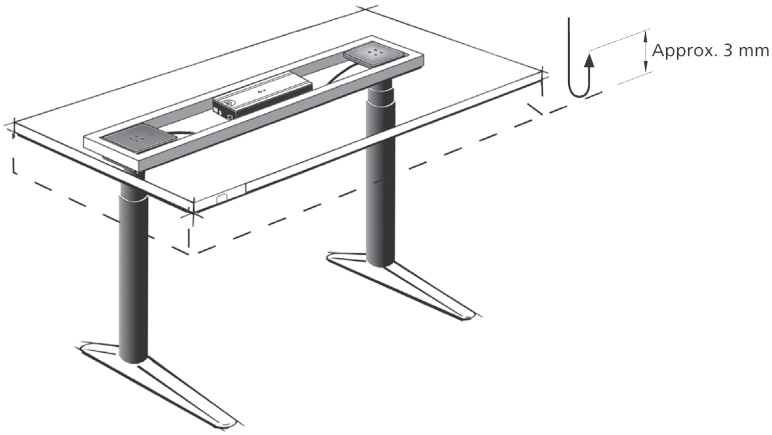

The CBD6S (SMPS) can control the DB/DL in 2-parallel, 3-parallel, 4-parallel or even multi-parallel.

PIEZO™: description of the feature

For optimised safety against squeezing and blocking on a desk, LINAK has developed the DBs and columns with an integrated sensor, called PIEZO. The option minimises the risk of damages on a desk caused by squeezing or blocking of obstacles in up and down direction. Examples could be driving down into an office chair or into a container or up into a windowsill. To a certain extent, the system also increases the personal safety, but it does not comply with legislation describing personal safety.

PIEZO allows the DBs or columns to have the standard built-in dimension and the standard stroke length. There are no visible changes to the column.

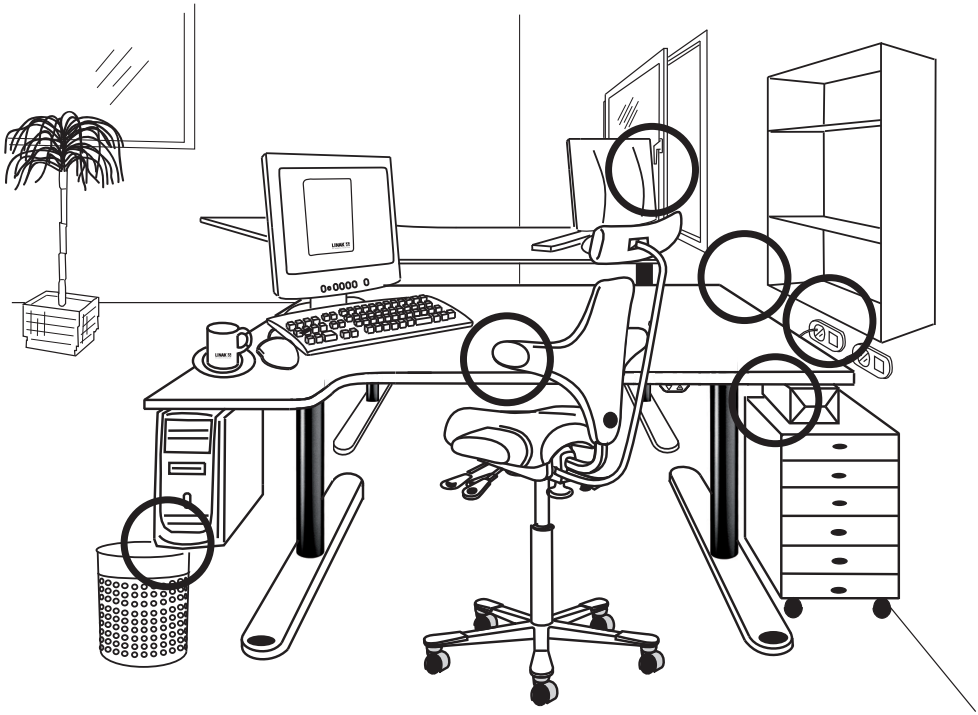

Examples where PIEZO avoids squeezing situations.

Accessories and repair

Ordering accessories
Order from your nearest LINAK® dealer or subsidiary.

Accessories
Please contact your nearest LINAK dealer for information.

Repairs
Systems should only be repaired by an authorised LINAK service centre or engineer. Systems to be repaired under warranty must be sent to an authorised LINAK service centre.

Warning!
By unauthorised opening of the system there is a risk that it may malfunction at a later date.

Spare parts
Please contact your nearest LINAK dealer for information on spare parts.

Disposal of LINAK products

As LINAK customers often ask us how our products can be disposed of or scrapped, we have prepared this guidance that enables a classification to different waste fractions for recycling or combustion.

Guidance

We recommend that our products be disassembled as much as possible and divided into different waste groups for recycling or combustion.
For example, waste can be sorted into metals, plastics, cable scrap, combustible materials and recoverable resources.

Some of these main groups can be further divided into subgroups; e.g. metal can be divided into steel/ aluminium/copper and plastic can be divided into ABS/PA/PE/PP.

As an example, the table below breaks down the different components in LINAK products to various recycling groups:

Product	Components	Recycling group
Column/ Actuator :	Spindle and motor Plastic housing Cable PC boards	Metal scrap Plastic recycling or combustion Cable scrap or combustion Electronic scrap
Control Box :	PC boards Plastic housing Cable Transformer	Electronic scrap Plastic recycling or combustion Cable scrap or combustion Metal scrap
Handset/Control :	Plastic housing Cable PC boards	Plastic recycling or combustion Cable scrap or combustion Electronics scrap

By now, almost all our casted plastic parts are supplied with an interior code for plastic types and fibre contents, if any.

Main groups of disposal

Product main groups	Metal scrap	Cable scrap	Electronics scrap	Plastic recycling or combustin	Comments
DL12	X	X	X	X	
DB12	X	X	X	X	
DL14	X	X	X	X	
DB14	X	X	X	X	
DL17	X	X	X	X	
CBD6S (SMPS)			X	X	
DPXX		X	X	X	

Disposal of batteries

Details regarding safe disposal of used and leaking batteries:
Batteries should be disposed in accordance with appropriate federal, state and local regulations. LINAK recommends that used or leaking batteries are disposed through local recycling system. Please do not throw used or leaking batteries in normal household waste or in nature. This will cause damage to the enviroment.

How to deal with leaking batteries

Leaking batteries should be disposed as described above.
If leaking batteries are discovered in the product, the batteries must be removed at once to minimise damage to the product. If leaking batteries are left in the product, it might become defective.
It is recommended to use plastic gloves when handling leaking batteries. The contents of leaking batteries can cause chemical burns and respiratory irritation.
If exposed to the contents of a leaking battery, please wash with soap and water. If irritation persists, please seek medical attention. In case of eye contact, please flush eyes thoroughly with water for 15 minutes and seek medical attention."

Labels

Label for DB12

Label for DL12

Label for DL17

Label for DB14

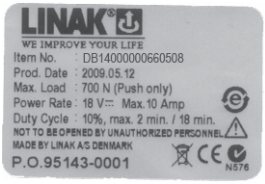
LINAK
WE IMPROVE YOUR LIFE
Item No. : DB14000000660508
Prod. Date : 2009.05.12
Max. Load : 700 N (Push only)
Power Rate : 18 V⎓ Max.10 Amp
Duty Cycle : 10%, max. 2 min. / 18 min.
NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL
MADE BY LINAK A/S DENMARK
P.O.95143-0001
N576

Label for DL14

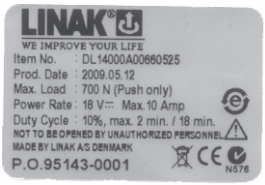
LINAK
WE IMPROVE YOUR LIFE
Item No. : DL14000A00660525
Prod. Date : 2009.05.12
Max. Load : 700 N (Push only)
Power Rate : 18 V⎓ Max.10 Amp
Duty Cycle : 10%, max. 2 min. / 18 min.
NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL
MADE BY LINAK A/S DENMARK
P.O.95143-0001
N576

Label for CBD6S 200W (SMPS)

Label for CBD6S 300W (SMPS)
up to 4 channels

LINAK
GROUP
HEADQUARTERS
SMEDEVAENGET 8
DK 6430 NORDBORG
WE IMPROVE YOUR LIFE
DESIGNED IN DENMARK
Item : CBD6SP00020A-709
Date : 2014.02.07
U In : 90 V - 240 V ~, 48 Hz - 63 HZ
P In : 450 W
U Out: 12 V⎓ - 40 V⎓
Op. : Int. 10%, Max. 2 min./18 min.
S.W. P/N.: 03002000 Ver. XXX
NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL
P.O.-0000
Assembled in China 01

LINAK APPLICATION POLICY

The purpose of the application policy is to define areas of responsibilities in relation to applying a LINAK product defined as hardware, software, technical advice, etc. related to an existing or a new customer application.

LINAK products as defined above are applicable for a wide range of applications within the Medical, Furniture, Desk and Industry areas. Yet, LINAK cannot know all the conditions under which LINAK products will be installed, used, and operated, as each individual application is unique.

The suitability and functionality of the LINAK product and its performance under varying conditions (application, vibration, load, humidity, temperature, frequency, etc.) can only be verified by testing, and shall ultimately be the responsibility of the LINAK customer using any LINAK product.

LINAK shall be responsible solely that LINAK products comply with the specifications set out by LINAK and it shall be the responsibility of the LINAK customer to ensure that the specific LINAK product can be used for the application in question.

DRAWING APPENDIX

DL12

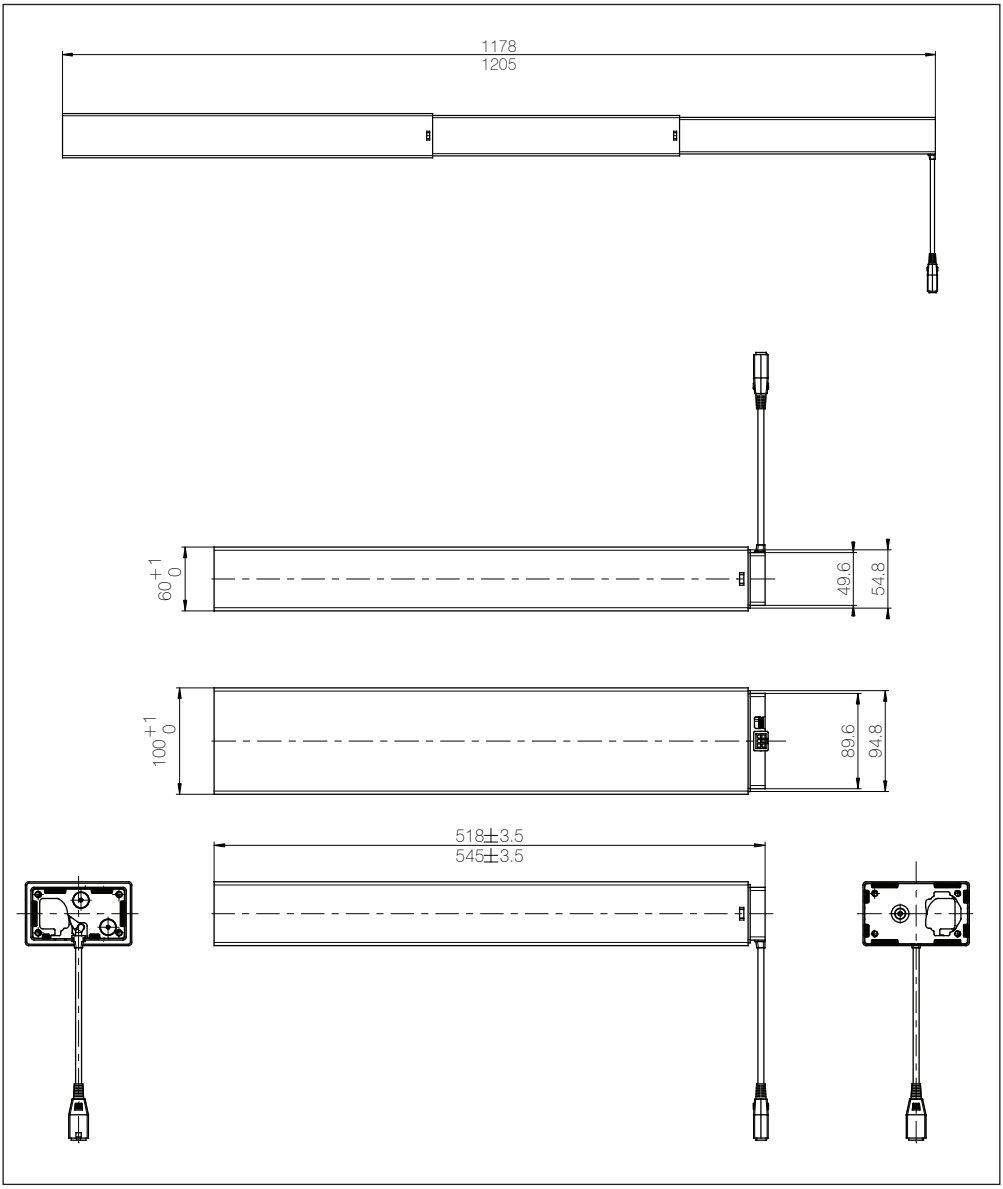

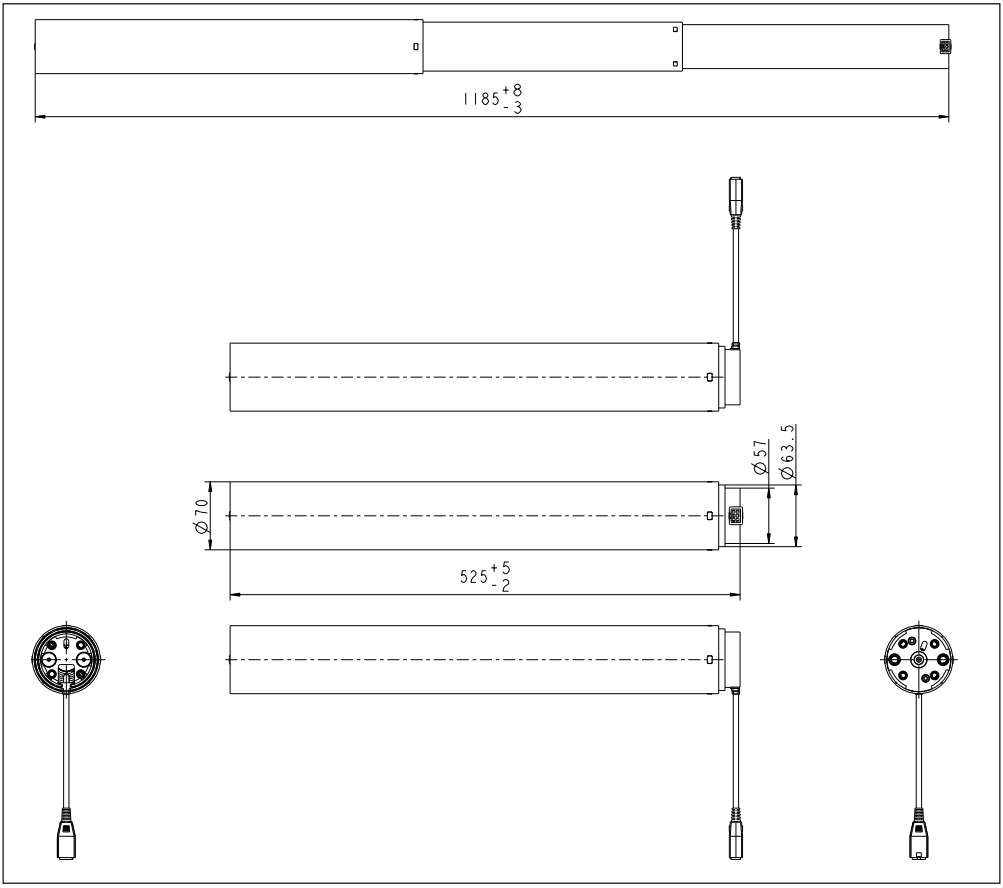
1185 +8 -3
Ø57
Ø63.5
Ø70
525 +5 -2

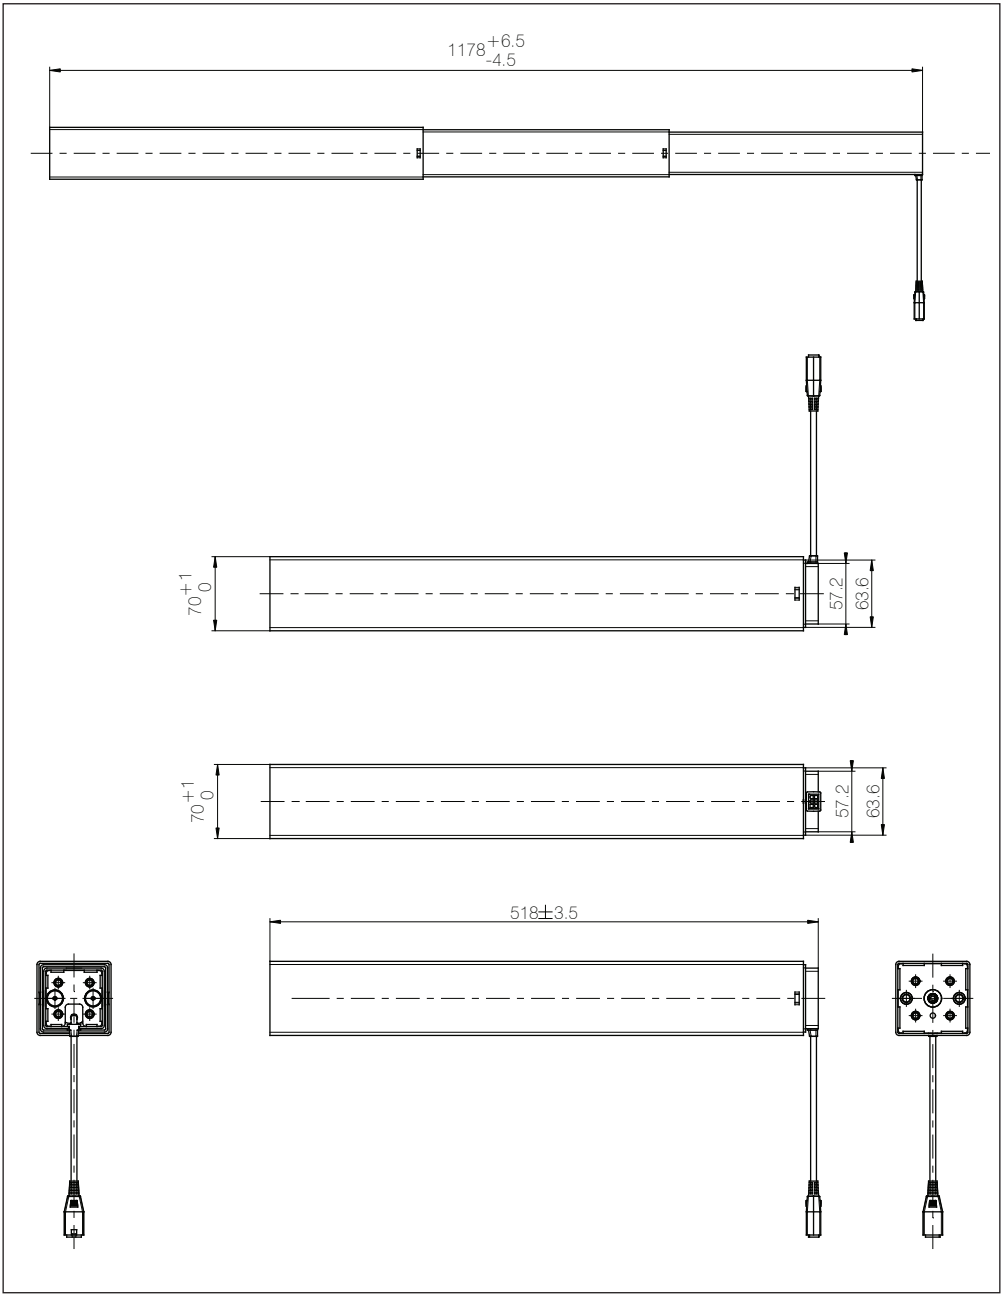
1178 +6.5 -4.5
70 +1 0
57.2
63.6
70 +1 0
57.2
63.6
518±3.5

DB12

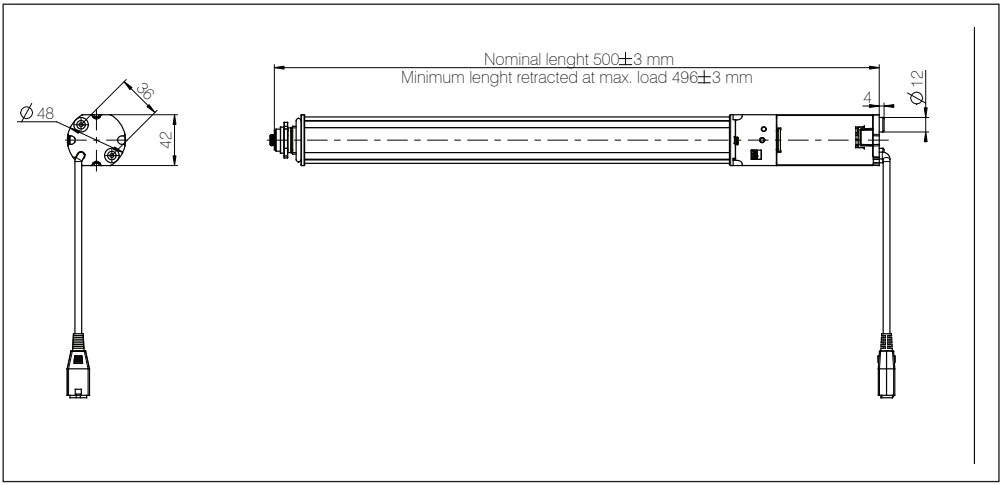
Nominal lenght 500±3 mm
Minimum lenght retracted at max. load 496±3 mm
Ø 48
36
42
4
Ø 12

DB14

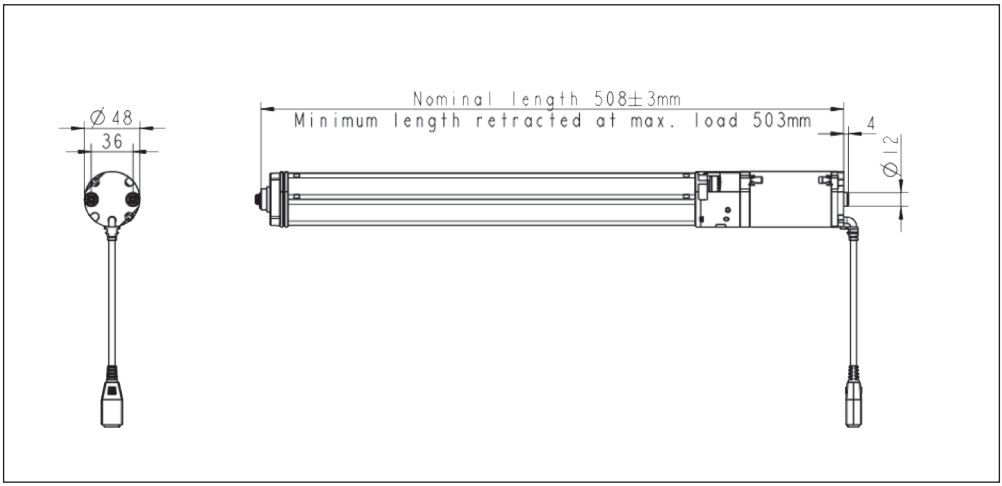
Nominal length 508±3mm
Minimum length retracted at max. load 503mm
Ø 48
36
4
Ø 12

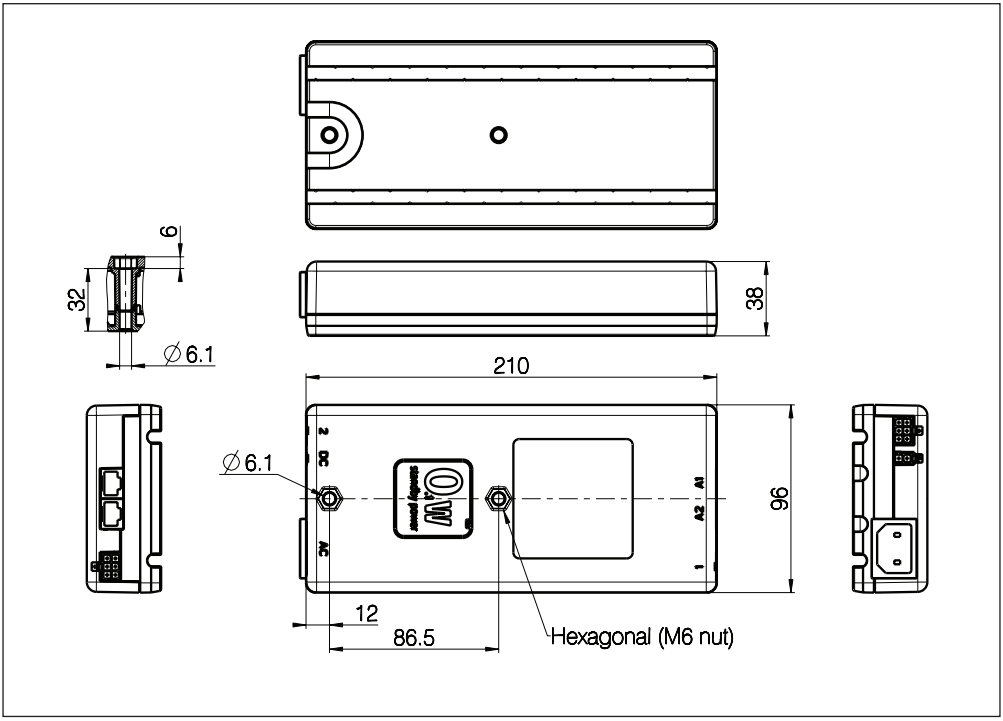
6
32
∅6.1
38
210
∅6.1
96
12
86.5
Hexagonal (M6 nut)

CBD6S 300W (SMPS) up to 4 channels

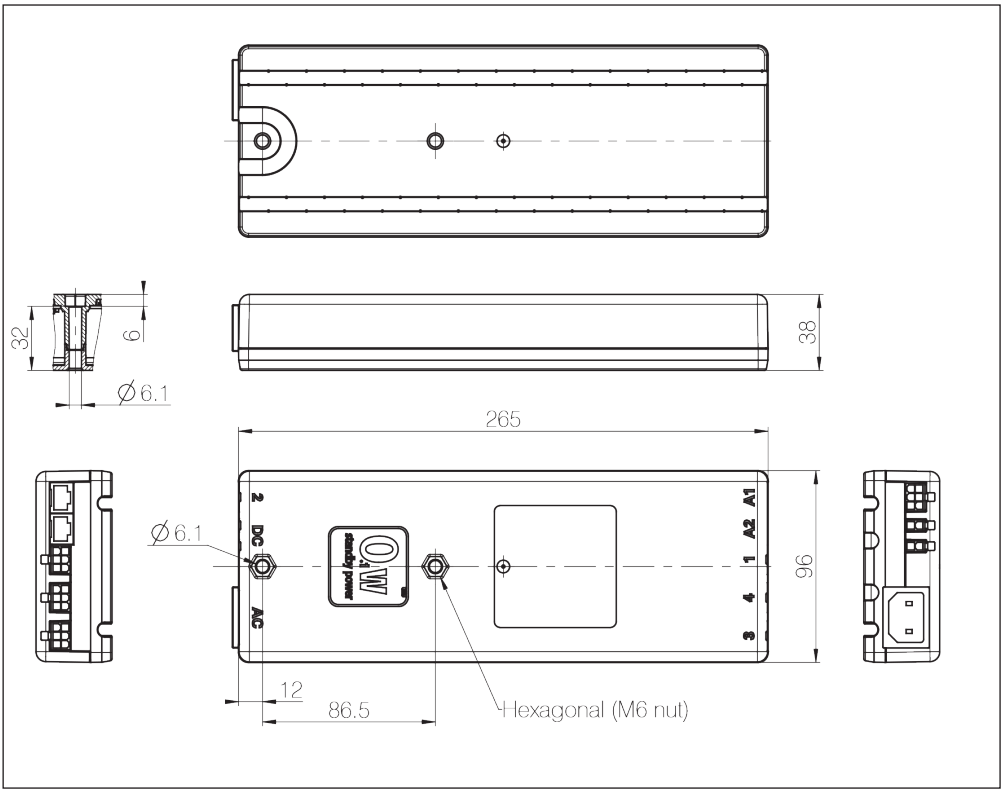

DECLARATION OF CONFORMITY

LINAK A/S
Smedevænget 8
DK - 6430 Nordborg

hereby declares that LINAK Actuator System composed of:

Control Box(s)	CBD6S	
And		
Linear Actuator(s)	31xxxH-xxxxx50S, DB4, DB5, DB6, DB7, DB9, DB12, DB14, DB16, LA23	and / or
Lifting Column(s)	DL1A, DL2, DL4, DL5, DL6, DL7, DL8, DL9, DL10, DL11, DL12, DL14, DL15, DL16, DL17, BASE1	
And		
Desk Panel(s)	DP1C, DP1K, DP1L, DP1V, DP1U, DPA, DPB, DPF, DPH, DPT, WDPL1	and / or
Handset(s)	RFT000, RFRL00x, HB1xRF3000, HB2xRFx000	

complies with EMC Directive: 2004/108/EC according to following standards:
EN 61000-6-1:2007, EN 61000-6-3:2007, EN 55014-1:2007+A1+A2, EN 55022:2011 Class B,

complies with Low Voltage Directive 2006/95/EC according to the standard:
EN 60335-1:2012

complies with Machinery Directive 2006/42/EC according to the standard:
EN 13849-1:2008 SRP/CS Cat. B, PL = b and SRESW PL = b

complies with RoHS2 Directive 2011/65/EU according to the standard:
EN 55581:2012

and		
RF Controls:	RF-transmitter: HB1xRF3000	and/or
	RF-transmitter: HB2xRFx000	and/or
	RF-receiver: RFT000, RFRL	

complies with the Radio equipment and Telecommunications terminal equipment Directive 1999/5/EC:
EN 300220-2:2007, EN 61000-6-1:2007, EN 61000-6-3:2007,
EN 60335-1:2012, EN 62311:2008

Nordborg, 2014-04-09

LINAK A/S
John Kling, B.Sc.E.E.
Certification and Regulatory Affairs
Authorized to compile the relevant technical documentation

Original Declaration

FACTORIES

CHINA
LINAK (Shenzhen) Actuator Systems, Ltd.
Phone: +86 755 8610 6656
Fax: +86 755 8610 6990
E-mail: sales@linak.cn
www.linak.cn

DENMARK
LINAK A/S - Group Headquarters, Guderup
Phone: +45 73 15 15 15
Fax: +45 74 45 80 48
Fax: +45 73 15 16 13 (Sales)
E-mail: info@linak.com
www.linak.com

SLOVAKIA
LINAK Slovakia s.r.o.
Phone: +421 51 75 63 414
Fax: +421 51 75 63 410
E-mail: jp@linak.sk
www.linak.com

USA
LINAK U.S. Inc.
North and South American Headquarters
Phone: +1 502 253 5595
Fax: +1 502 253 5596
E-mail: info@linak-us.com
www.linak-us.com

SUBSIDIARIES

AUSTRALIA
LINAK Australia Pty. Ltd
Phone: +61 3 8796 9777
Fax: +61 3 8796 9778
E-mail: sales@linak.com.au
www.linak.com.au

AUSTRIA
LINAK Repräsentanz Österreich (Wien)
Phone: +43 (1) 890 7446
Fax: +43 (1) 890 744615
E-mail: info@linak.de
www.linak.at

BELGIUM & LUXEMBOURG
LINAK Actuator-Systems NV/SA
Phone: +32 (0)9 230 01 09
Fax: +32 (0)9 230 88 80
E-mail: info@linak.be
www.linak.be

BRAZIL
LINAK Do Brasil Comércio De Atuadores Ltda.
Phone: +55 (11) 2832 – 7070
Fax: +55 (11) 2832 – 7060
E-mail: info@linak.com.br
www.linak.com.br

CANADA
LINAK Canada Inc.
Phone: +1 502 253 5595
Fax: +1 416-255-7720
E-mail: info@linak.ca
www.linak-us.com

CZECH REPUBLIC
LINAK C&S S.R.O.
Phone: +420581741814
Fax: +420581702452
E-mail: ponizil@linak.cz
www.linak.cz

DENMARK
LINAK Danmark A/S
Phone: +45 86 80 36 11
Fax: +45 86 82 90 51
E-mail: linak@linak-silkeborg.dk
www.linak.dk

FINLAND
LINAK OY
Phone: +358 10 841 8700
Fax: +358 10 841 8729
E-mail: linak@linak.fi
www.linak.fi

FRANCE
LINAK France E.U.R.L
Phone: +33 (0) 2 41 36 34 34
Fax: +33 (0) 2 41 36 35 00
E-mail: linak@linak.fr
www.linak.fr

GERMANY
LINAK GmbH
Phone: +49 6043 9655 0
Fax: +49 6043 9655 60
E-mail: info@linak.de
www.linak.de

INDIA
LINAK A/S India Liaison Office
Phone: +91 120 4393335
Fax: +91 120 4273708
E-mail: info@linak.in
www.linak.in

IRELAND
LINAK UK Limited - Ireland
Phone: +44 (0)121 544 2211
Fax: +44 (0)121 544 2552
+44 (0)796 855 1606 (UK Mobile)
+35 387 634 6554 (Republic Of Ireland Mobile)
E-mail: sales@linak.co.uk
www.linak.co.uk

ITALY
LINAK Italia S.r.l.
Phone: +39 02 48 46 33 66
Fax: +39 02 48 46 82 52
E-mail: info@linak.it
www.linak.it

JAPAN
LINAK K.K.
Phone: 81-45-533-0802
Fax: 81-45-533-0803
E-mail: linak@linak.jp
www.linak.jp

MALAYSIA
LINAK Actuators Sdn. Bhd.
Phone: +60 4 210 6500
Fax: +60 4 226 8901
E-mail: info@linak-asia.com
www.linak.my

NETHERLANDS
LINAK Actuator-Systems B.V.
Phone: +31 76 5 42 44 40
Fax: +31 76 5 42 61 10
E-mail: info@linak.nl
www.linak.nl

NEW ZEALAND
LINAK New Zealand Ltd.
Phone: +64 9580 2071
Fax: +64 9580 2072
E-mail: nzsales@linak.com.au
www.linak.co.nz

NORWAY
LINAK Norge AS
Phone: +47 32 82 90 90
Fax: +47 32 82 90 98
E-mail: info@linak.no
www.linak.no

POLAND
LINAK Polska
Phone: +48 (22) 500 28 74
Fax: +48 (22) 500 28 75
E-mail: dkreh@linak.dk
www.linak.pl

REPUBLIC OF KOREA
LINAK Korea Ltd.
Phone: +82-(0)2-6231-1515
Fax: +82-(0)2-6231-1516
E-mail: scully@linak.kr
www.linak.kr

RUSSIAN FEDERATION
000 LINAK
Phone: +7 495 280 14 26
Fax: +7 495 687 14 26
E-mail: info@linak.ru
www.linak.ru

SPAIN
LINAK Actuadores, S.L.u
Phone: +34 93 588 27 77
Fax: +34 93 588 27 85
E-mail: linakact@linak.es
www.linak.es

SWEDEN
LINAK Scandinavia AB
Phone: +46 8 732 20 00
Fax: +46 8 732 20 50
E-mail: info@linak.se
www.linak.se

SWITZERLAND
LINAK AG
Phone: +41 43 388 31 88
Fax: +41 43 388 31 87
E-mail: info@linak.ch
www.linak.ch

TAIWAN
LINAK A/S Taiwan Representative Office
Phone: +886 2 27290068
Fax: +886 2 27290096
Mobile: +886 989292100
E-mail: michael.chen@linak.com.tw
www.linak.com.tw

TURKEY
LINAK Ith. İhr. San. ve Tic. A.Ş.
Phone: + 90 312 4726338
Fax: + 90 312 4726635
E-mail: info@linak.com.tr
www.linak.com.tr

UNITED KINGDOM
LINAK UK Limited
Phone: +44 (0)121 544 2211
Fax: +44 (0)121 544 2552
E-mail: sales@linak.co.uk
www.linak.co.uk

DISTRIBUTORS

ARGENTINA
Novotec Argentina SRL
Phone: +[54] (11) 4303-8900
+[54] (11) 4303-8989
Fax: +[54] (11) 4032-0184
E-mail: info@novotecargentina.com
www.novotecargentina.com

AUSTRALIA
Ballarat Industrial Supplies
www.ballind.com.au

BL Shipways & Co
www.blshipway.com.au

Gas Strut Marine and Industrial
www.gasstrutmarine.com.au

Prime Motion & Control
www.primehyd.com.au

West Vic Industrial Supplies
www.westvicindustrial.com.au

COLOMBIA
MEM Ltda
Phone: +[57] (1) 334-7666
Fax: +[57] (1) 282-1684
E-mail: servicioalcliente@memltda.com.co
www.memltda.com.co

INDONESIA
Pt. Himalaya Everest Jaya
Phone: +6 221 544 8956,
+6 221 544 8965
Fax: +6 221 619 4658,
+6 221 619 1925
E-mail: hejplastic-div@centrin.net.id
www.hej.co.id

IRAN
Bod Inc.
Phone: +98 2188998635-6
Fax: +98 2188954481
E-mail: info@bod.ir
www.bod.ir

PERU
Percy Martin Del Aguila Ubillus
Phone: +51 99-883-9879

RUSSIAN FEDERATION
000 FAM
Phone: +7 812 3319333
Fax: +7 812 3271454
E-mail: purchase@fam-drive.ru
www.fam-drive.ru

SINGAPORE
Servo Dynamics Pte. Ltd.
Phone: +65 6844 0288
Fax: +65 6844 0070
E-mail: servodynamics@servo.com.sg
www.servo.com.sg

SOUTH AFRICA
Industrial Specialised Applications CC
Phone: +27 11 312 2292 or +27 11 2077600 (Switch Board)
Fax: +27 11 315 6999
E-mail: garth@isagroup.co.za
www.isaza.co.za

UNITED ARAB EMIRATES
Mechatronics
Phone: +971 4 267 4311
Fax: +971 4 267 4312
E-mail: mechtron@emirates.net.ae
www.mechatronics.ae

For contact details on other countries please visit *www.linak.com* or contact:

LINAK INTERNATIONAL
Phone: +45 73 15 15 15
Fax: +45 74 45 90 10
Fax: +45 73 15 16 13 (Sales)
E-mail: info@linak.com
www.linak.com

Terms of use
The user is responsible for determining the suitability of LINAK products for specific application. LINAK takes great care in providing accurate and up-to-date information on its products.
However, due to continuous development in order to improve its products, LINAK products are subject to frequent modifications and changes without prior notice. Therefore, LINAK cannot guarantee the correct and actual status of said information on its products.
While LINAK uses its best efforts to fulfil orders, LINAK cannot, for the same reasons as mentioned above, guarantee the availability of any particular product. Therefore, LINAK reserves the right to discontinue the sale of any product displayed on its website or listed in its catalogues or other written material drawn up by LINAK.
All sales are subject to the Standard Terms of Sale and Delivery for LINAK. For a copy hereof, please contact LINAK.

LINAK®
WE IMPROVE YOUR LIFE

LINAK A/S reserve the right to make technical alterations
Copyright © LINAK 2014.06 MA-M9-02-493-B